

# GODIVA *Prima* Flow Diagram

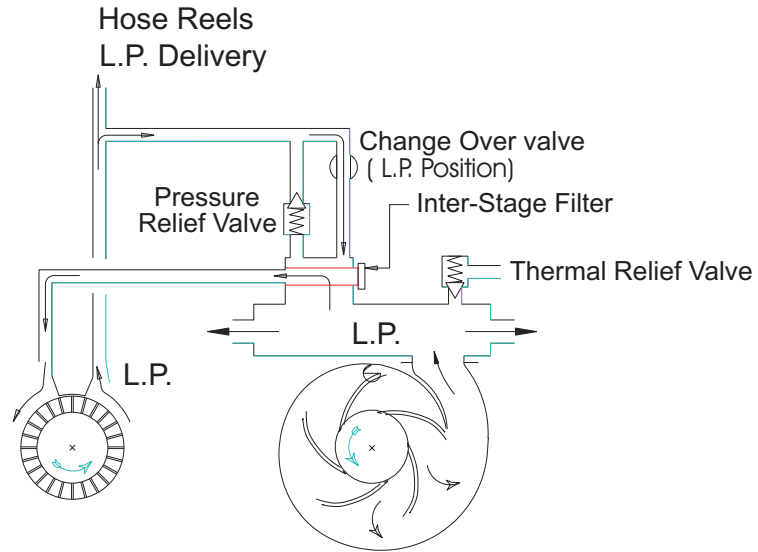


DIAGRAM 1 LOW PRESSURE MODE - CHANGE-OVER VALVE OPEN

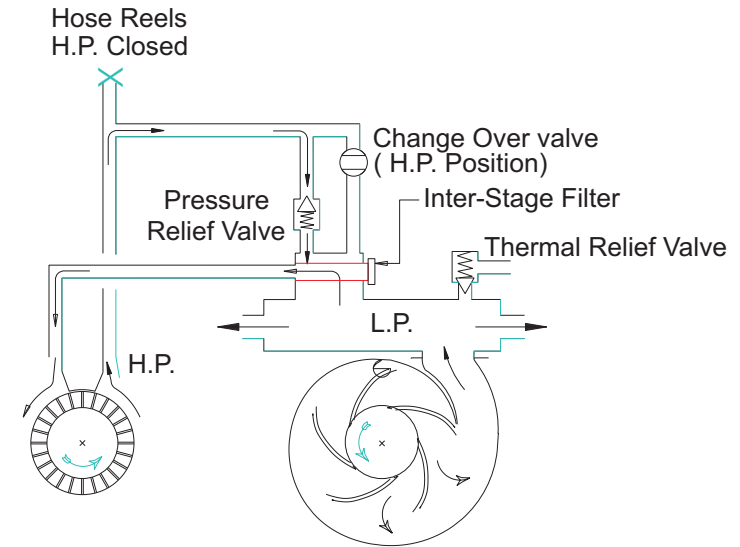


DIAGRAM 3  
LOW &/OR HIGH PRESSURE MODE - CHANGE OVER VALVE CLOSED  
( OVERPRESSURE- HIGH PRESSURE OUTLET RESTRICTED )

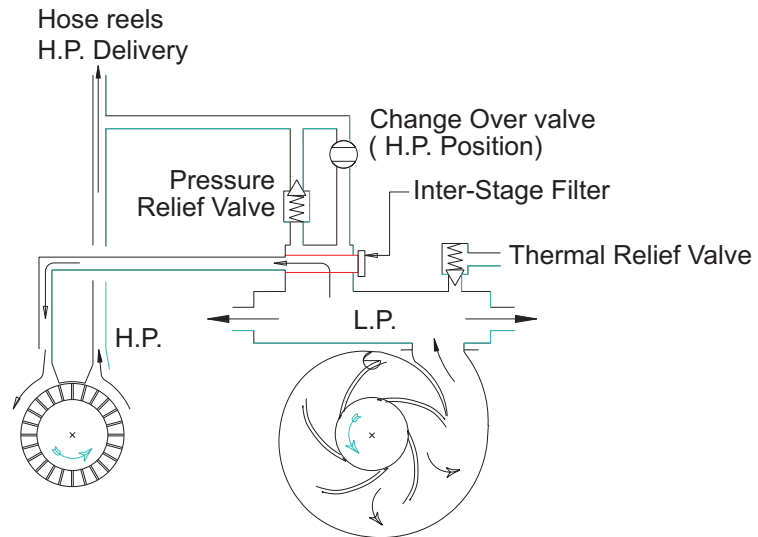


DIAGRAM 2 LOW &/OR HIGH PRESSURE MODE -  
CHANGE-OVER VALVE CLOSED

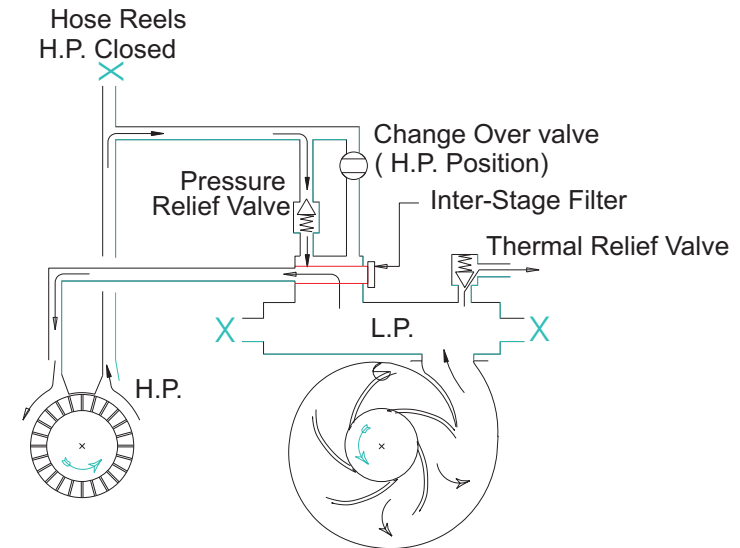


DIAGRAM 4  
( NO DISCHARGE L.P. OR H.P. - OVERHEAT PROTECTION )